 


NovaSource Quick Start Guide

The employee-owners of Nova Engineering, Inc. would like to **thank you** for purchasing the *NovaSource* RF Signal Source.



Please follow this short step-by-step guide to have your *NovaSource* up and running in minutes.

1. Install the software from the enclosed CD onto your PC. Contained on this CD are two directories: NSCP16, NSCP32.
 - a. If you are running **Windows 3.1, 95 or 98**,
 - Open the NSCP16 directory
 - Run SETUP.EXE
 - b. If you are running **Windows NT or 2000**,
 - Open the NSCP32 directory
 - Follow the directions in README.TXT in that directory
2. Connect the enclosed cable to the parallel port of your PC and to the *NovaSource*.
3. Connect power to the *NovaSource*.
4. From your PC, run the installed *NovaSource Control Panel* (NSCP) software to control and set the *NovaSource*. *NovaSource* retains its settings even after power is disconnected.

The user's manual can be found on the enclosed CD and at our website www.nova-eng.com.

If you have any questions or comments, I would love to hear from you. Contact me at 1-513-642-3000 or info@nova-eng.ch.

Thank you,

John Asher
Product Specialist

NL-15571 / Rev.02111700